


PANELIZED ROOF INSTRUCTIONS

STEP 1

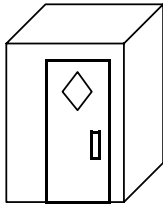


After the sauna room has been assembled using the pre-built room instructions, you will be ready to install the roofing system.


NOTE:
The outside crown molding can not be used when installing this roof system.

STEP 2

Install 6 ml. Plastic sheeting (supplied in kit) by stapling around outside edge of the top of the sauna room.

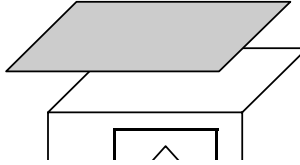


STEP 3

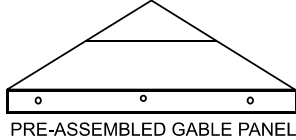

Install the two (2) pre-assembled gable panels using the screws provided. One attaches to the left side wall of the sauna and the other attaches to the right side wall as shown. The ends of the gable panels should be of equal distance from the sauna corners. This distance should be 6" at both ends of each gable panel. Install wooden plugs in screw holes.

NOTE: The gable panels are installed on the front and back walls on the 6' x 8' sauna roof system

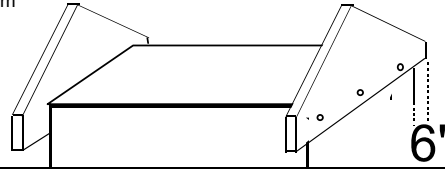

STEP 4

A center truss (or trusses) is installed between the gable end panels. To determine the proper position of the center truss, first set a roof panel in place (See diagram A). **DO NOT ATTACH THE ROOF PANEL TO THE GABLE PANELS.** The nailing strips on the bottom side of the roof panel indicate the truss location. Set the center truss in place and mark its position on the sauna top (diagram B). Set the roof panel aside and install the center truss with the screws supplied. Make sure the truss is centered front-to-back with equal overhang at both ends.

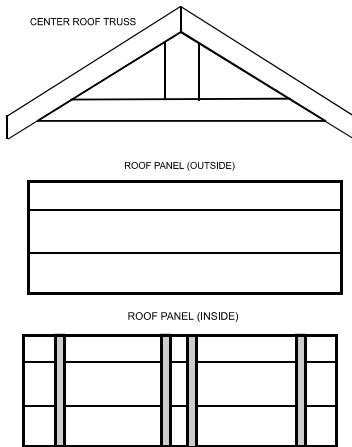


DIAGRAM A

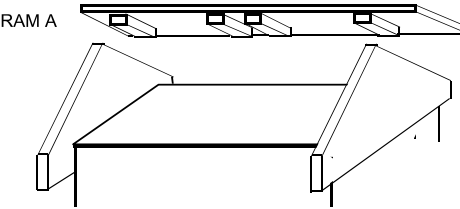


DIAGRAM B

